













## Mimaki

## Replacing method of wiper

When the warning message "Replace a WIPER" is indicated in the display, immediately check and replace the wiper.

Also, wipe off ink sticking at the lower surface of the slider.

Replace WIPER

The following items are packed in this kit.


Check them for quantities and appearance. If you find any problems, please contact your distributor.

- (1) In LOCAL, press (FUNC1) (MENU) key and select "MAINTENANCE".
- (2) Select "STATION".
- (3) Press ▲ ▼ to select "WIPER EXCHANGE", and press the ENTER key.
- (4) Press the ENTER key.

  The carriage will move onto the platen.


\_\_\_\_

(5) Open the front cover then remove the wiper.Pull out the wiper by holding the protrusions at its both ends.

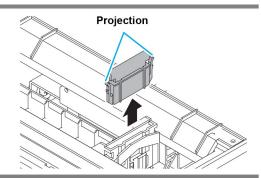

(6) Insert a new wiper.

Insert a new wiper by holding its both ends.

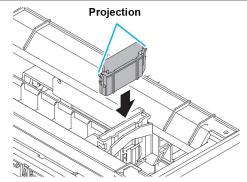

(7) Close the front cover then press the ENTER key.

After its initial operation, the machine returns to LOCAL.

**CONSEIL** 

(d) INSTALLATION

(S) FORMATION

(S) COLORIMÉTRIE

● UNTLINE

**MAINTENANCE** 

encraje.

Mail: encraje@encraje.fr | Tél. 02 47 43 09 17